


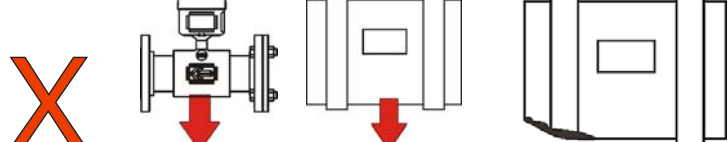
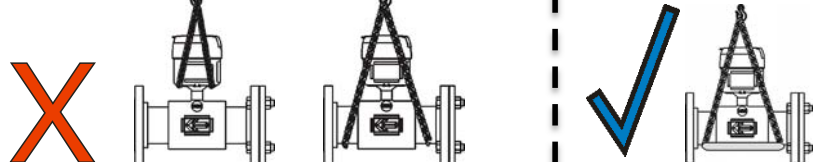
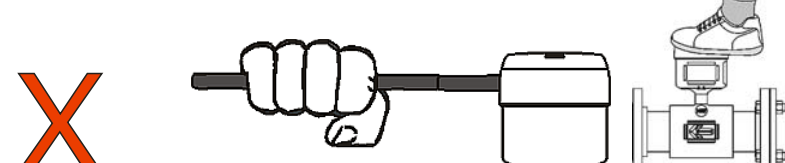
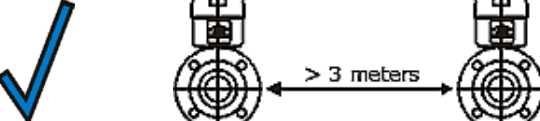
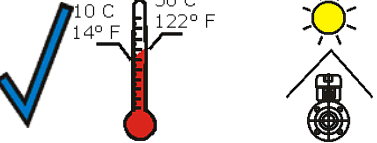
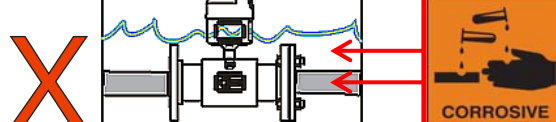

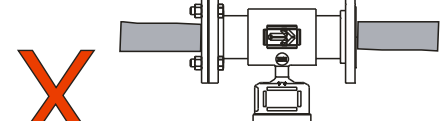
Elster AMCO Water evoQ4 Quick Reference Guide

Warning – Read all handling and installation instructions in the user manual.

Download the manual at

http://www.elsteramcowater.com/assets/downloads/evoQ4_Installation_manual_INS_05-13.pdf

Failure to follow handling and installation instructions will void product warranty.

<ul style="list-style-type: none"> Upon receipt of product packages, check the appearance and contents to determine if any damage occurred in transit and that correct configuration of product and accessories arrived. 	
<ul style="list-style-type: none"> Do not drop the product or apply sudden force (shock) to it. 	
<ul style="list-style-type: none"> Do not lift the product by the register or register neck; deformation of the neck may damage the meter. Do not lift the product by the flange or joint pipe. Use sling to transport. 	
<ul style="list-style-type: none"> Do not lift or carry the product by accessory cables. Hold the product by the outer case. Do not step on the display / register of the meter at any time. 	
<ul style="list-style-type: none"> Do not install the product in an area affected by strong electromagnetic field. 	
<ul style="list-style-type: none"> Do not install the product in an area that is out of the specified range of temperature. See Installation manual. Freezing must be avoided. 	
<ul style="list-style-type: none"> Do not install the product in a corrosive environment. Do not use product for corrosive fluid measurement. Potable water use only. 	
<ul style="list-style-type: none"> The meter must be installed such that a full pipe of water passes through the meter at all times. 	
<ul style="list-style-type: none"> Do not mount the meter with its display surface facing downwards. A remote display is available for purchase. 	

Elster AMCO Water evoQ4 Quick Reference Guide

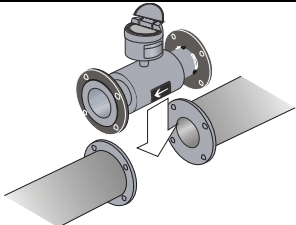
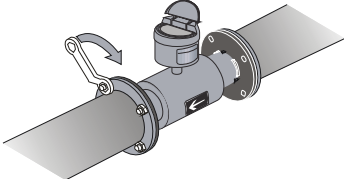
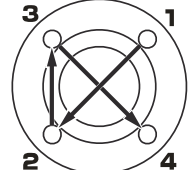
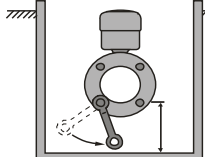
Warning – Read all handling and installation instructions in the user manual.

Download the manual at

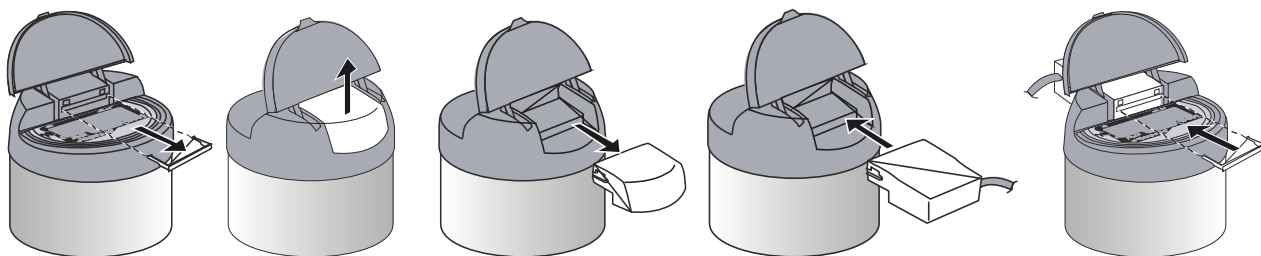
http://www.elsteramcowater.com/assets/downloads/evoQ4_Installation_manual_INS_05-13.pdf

Failure to follow handling and installation instructions will void product warranty.

Installation Instruction Quick Summary:

<ul style="list-style-type: none"> Place the meter between the piping flanges, set in the desired position, taking care not to damage it. 	
<ul style="list-style-type: none"> Fit the gaskets in between the pipe ends and the meter. Insert bolts, attach nuts, and tighten slightly. Make sure meter centerline aligns with the pipe and the display is not askew. 	
<ul style="list-style-type: none"> Check meter centerline again, and then tighten the nuts diagonally in the order shown in the figure to the right. Tighten the nuts to squeeze the gasket until fully sealed. 	
<ul style="list-style-type: none"> When tightening the flange connection, be sure to tighten in a balanced fashion so that the companion flange face and the tube extension meet flush around the entire face. Do not over tighten the flange bolts. A torque value between 60 and 65 lb*ft (81 – 88 Nm) is recommended. 	

Optional Accessory: If applicable follow instructions for mounting the remote display or output module onto the meter:



Do not hold the center of the retaining clip when inserting or removing it. Hold both ends and slowly insert or remove it. Ensure that the lugs on the clip ends are pointed upward. Ensure the optical port is not blocked by foreign substances.

Disposal Instructions:

Do not cut, disassemble, transform, heat, or burn when disposing of the products. Follow local, state, and federal regulations for disposal and handling of lithium containing electronic devices. Take special care to avoid damage to the batteries when disposing of the products to avoid ignition or explosion.